

SCUBAJET QUICKSTART



Please ensure to read the user manual carefully and watch our operations videos before setting up and using the SCUBAJET.

User manual: <http://www.scubajet.com/user-manual>

Operations video EN: <https://youtu.be/m9jMg7JKYLU>


In case of any problems, please contact our support team and send an email to support@scubajet.com or go to our support area on the website www.scubajet.com/support and open up a new ticket. We'll come back to you shortly.

DIVE Package

When connecting the motor unit with the tube, make sure, that the outlet – as shown in the picture – is located on the left side of the adapter connection. Slide on the Dive adapter and fix it with the thumbwheelscrew.

Turning on the LED light

There's a small black switch mounted on the side of the dive adapter. With the nosecap installed, slide the switch forwards to turn the light on.

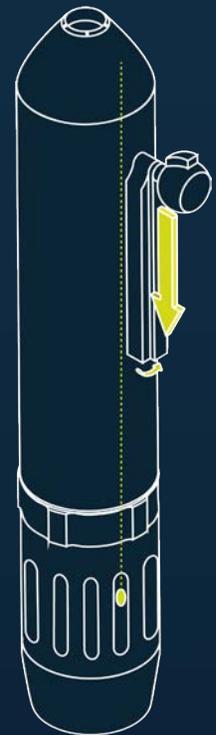

SUP Package

Every SUP Package comes with a SCUBAJET, either US Finbox or SlideIn Adapter, remote and repeater. The repeater is absolutely necessary for proper usage of the SCUBAJET and must be mounted as near as possible to the waterline and should be mounted < 15cm from SCUBAJET function ring.


Turning on the LED light

Activate the LED light in the remote settings by pushing the right hand button.

Battery usage (Detailed information in the User Manual section 4)



1 Keep the battery always dry and prevent from humidity.

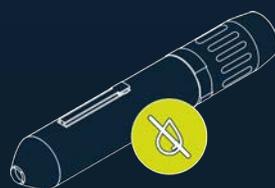

2 Ensure the SCUBAJET is dried thoroughly before opening the nose.



3 Only tighten and loose the screws on top of the battery by hand. Do not use a screw driver, but you may use a coin.




4 The battery is only ready for use if you hear the beep sound six times.

Pairing the SCUBAJET remote and repeater


The SCUBAJET, remote and repeater are already paired. To check, please turn on the remote and repeater, and place near Scubajet, with Scubajet control ring set on remote. If the screen displays „locked” in yellow letters it's already synced. If it's not synced, you'll find the message „SJ disconnected” and can follow these steps:

Before using charge your remote and repeater


by inserting them alternating in the docking station, with the back of unit facing the charging disk. It's the same charger you use for your battery packs

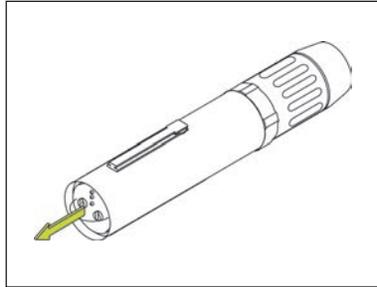


1 Open the SCUBAJET nose cone and remove the battery .

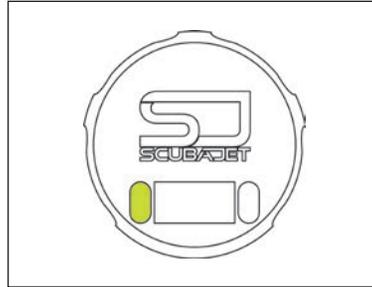


2 Turn on both the remote and repeater by pushing the **lefthand** buttons for **2 seconds**.

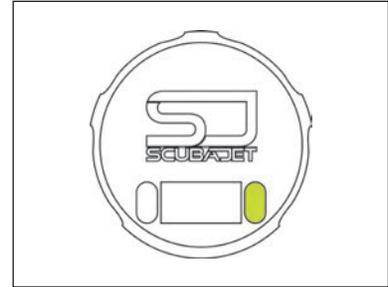


3 Go to the main menu of both devices by pushing the **righthand** button for **2 seconds**.

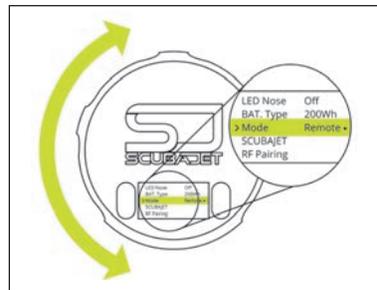


4 Turn the outer ring and select „Mode” in the main menu of the remote and repeater and activate „Repeat” and „Remote” mode on the corresponding device by pushing the **righthand** button.

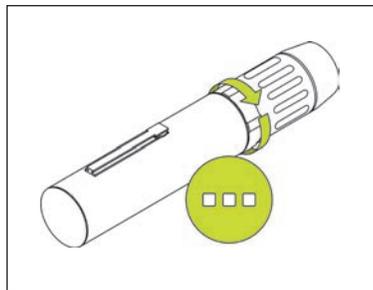

5 Turn the SCUBAJET function ring to speed 3 (***) .

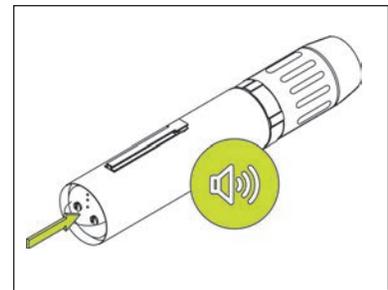


6 Insert the battery and wait for the beep sequence.

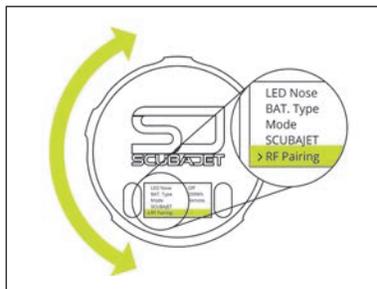

7 Open the main menu of both devices again and select **RF Pairing**. Confirm your selection by pushing the **righthand** button.



8 The pairing process starts once „REQ received” appears on the remote. Wait until **both** devices display „pairing successful”.

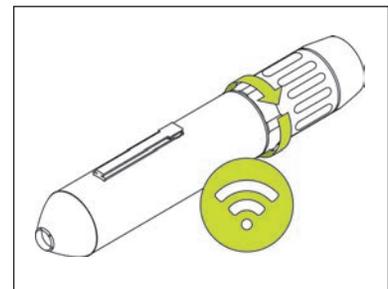

9 Turn the SCUBAJET control ring to **wireless** before using it.